

## QUICK REFERENCE CARD

How to use the most important features of CatchCam

### DO THIS FIRST:

- ✓ Fully charge camera and lamp.
- ✓ Fully charge included tablet computer.
- ✓ Insert battery into remote control.
- ✓ Sign into Google Play on the tablet.



### YOUR KIT CONTAINS:

1x CAMERA  
(Domed end)

1x LED LAMP  
(Flat end)



1x TABLET  
+ CatchCam app

1x CHARGER  
+ 1x USB-C cable  
+ 1x Power adapter



1x REMOTE



## 1 CHARGE



### 2. ALIGN & INSERT

Insert the Camera or Lamp into the Charger. Align red stripe with red indicator on Charger.

10 hours to charge from empty



### 3. TURN & LOCK

Turn clockwise to lock and charge. An orange light will appear.

### 1. PLUG IN POWER

Plug in power adapter and USB-C cable.




#### Charge Indicator LED:

- Orange light = Charging
- Green light = Battery full
- Flashing red = Battery empty
- Unlit = Not charging

## 2 RECORD



### USE THE REMOTE

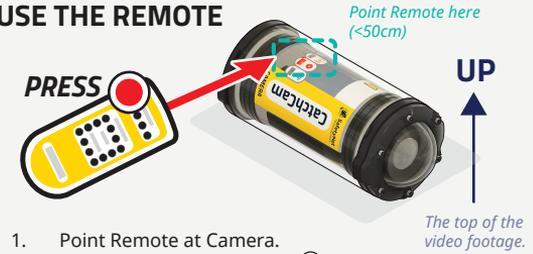

1. Point Remote at Camera.
2. Press 'start record' button.
3. A red light will appear on the Camera.

More recording options are available from the Settings page inside the App.

### WHERE ARE MY VIDEOS?

- Your recorded videos are stored inside the Camera.
- You can preview videos by connecting the Tablet to the Catchcam WiFi and streaming using the App.
- (Press the WiFi button on the Remote to broadcast the CatchCam WiFi network. It provides access to the Camera's videos. It does not connect to the internet.)
- Permanently download videos to your Tablet's memory using the App's 'Download' function.
- After downloading, you can edit and share these videos using other apps like WhatsApp or Facebook.
- Sharing requires an internet connection. You will need to connect the Tablet to a WiFi network that has an internet connection.



#### Record Indicator LED:

- Red light = Recording
- Unlit = Not recording

# 3 REMOTE CONTROL

## CAMERA

The top row of buttons control the Camera:

- Start recording
- Stop recording
- Start camera wifi
- No function

## LED LAMP

The lower buttons control the LED Lamp:

- Always ON
- Immersion-Activate
- Always Off
- Check battery
- Colour (white/red)
- Direction (front/side)
- Brightness (low/medium/high/super)



Remember to insert battery first. (Battery size CR2032, included in kit.)

# 4 DOWNLOAD



## 1. ACTIVATE WIFI

Point remote at camera. Press 'WiFi' button on remote control. The blue WiFi light will start blinking on the camera. The Camera is now broadcasting WiFi.




## 2. CONNECT

Using the tablet, join the WiFi network called 'catchcamXXXXXX'.



## 3. LAUNCH APP

Launch the CatchCam App on the Tablet home screen.

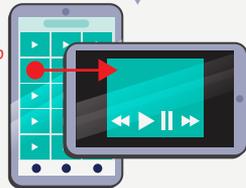

## 4. STREAM

Tap a thumbnail of video that you want to preview, to open the streaming player.

## 5. SELECT

Tap and hold video thumbnails to select the videos you would like to download and keep.



## 6. DOWNLOAD

Tap 'Download' at the top of the screen to transfer selected videos onto the Tablet's memory.

Charge Record WiFi



WiFi Indicator LED:

- Flashing blue light = WiFi on
- Steady blue light = Tablet connected
- Unlit = WiFi off

# 5 SHARE



## 1. CONNECT

Connect your tablet to your usual WiFi network which has an internet connection (not the CatchCam WiFi network).

## 2. SIGN IN

Launch your preferred social media app and sign in.



## 3. FIND

Find your downloaded videos in the 'My CatchCam Videos' folder on the tablet home screen.



## 4. EDIT

Optionally, use the Tablet's built-in apps to edit your videos before sharing. Edited videos will be saved in the Video Editor folder, found on the home screen.

## 5. SHARE

Share your videos with your colleagues. Tag us @SNTechUK

## KEEP UP TO DATE

Sign into Google Play on the Tablet. This will automatically keep your CatchCam updated with the latest features.



## MORE INSTRUCTIONS:

- See user guide PDF on Tablet.
- Watch instruction videos on Tablet.



# CatchCam